



Message/Error	Meaning	You Should
-F/-C	Temperature unknown.	Allow the pump to run for 2 minutes. The temperature will be displayed as the pump circulates the water.
Std/St STANDARD	The hot tub is running in Standard Mode.	Sit back and relax. Look for constellations if it's clear enough.
Ecn/EC ECONOMY	The hot tub is running in Economy Mode.	Enjoy the water. Refer to the heating modes page in your owner's manual to see what the heating modes mean.
SLP/SL SLEEP	The hot tub is operating in sleep heating mode. If the display shows this message only, blinking, the hot tub is shut down.	Switch to an active heating mode. The heating modes page in your owner's manual can help you make the right pick.
G.F.C.I. breaker will not stay on or trips intermittently	Your pump is seized or seizing and is drawing too many amps for the G.F.C.I. breaker. Or The heat element has failed. Or There is a wiring issue.	Call Oakville Home Leisure for a service call.
Jet pump is surging on high speed	The water level is too low on the hot tub (if it uses a jet pump for filtering). Or The plug in centre of the microfilter basket is not in place (if your hot tub is non-hush pump equipped). Or Your RFM jet nozzles are pointed toward the large suction fittings in the foot well.	Raise the water level in the hot tub to at least half way up the skimmer opening. Or Install a plug in basket. Or Redirect nozzles up and away from the large suction fittings. Turn off all air control for RFM jets.
Neck jet does not shut off	Internal portion of the two piece neck jet has been unscrewed by turning too far to the left.	Carefully pry the faceplate off with a flat head screwdriver and thread the internal back in. Replace the face plate and tighten the internal portion by turning the face plate clockwise.